


CLASSROOMS AUDIO / VISUAL GUIDE

Need Help?

Please contact KU IT at

785-864-1200

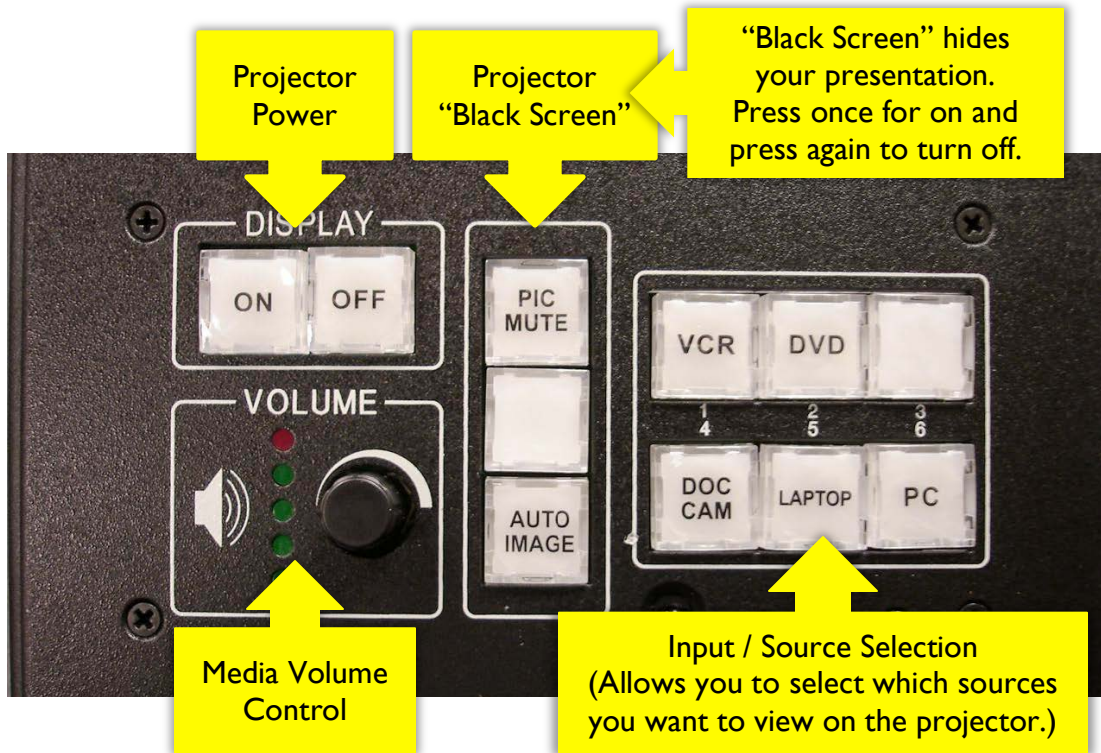

LAPTOP: Use the VGA cable to connect to your laptop and press the Laptop button.

PC: Press the PC button to connect to the computer in the classroom, select PC. You may also have to turn on the computer by pressing its main power button.

VCR: To connect to the classroom VCR player, press the VCR button. To control the VCR player, use the remote in the cabinet or buttons on the player.

DVD: To connect to the classroom DVD player, press the DVD button. To control the DVD player, use the remote in the cabinet or buttons on the player.

DOC CAM: To connect to the document camera, press Doc Cam. You may have to also turn on the document camera.

Instructors:

Please log in using your KU Online ID and password.

Don't forget to log out.

To log out, press the PC button on the A/V controller and log out on the computer.

If another class does not immediately follow yours, please turn off the projector.

Need help?

Classroom Support: 785-864-1200

Customer Service Center: 785-864-8080 or

itcsc@ku.edu

Follow us on Twitter  @KUTechnology