


# RIT 164 - TECHNOLOGY (A/V) GUIDE

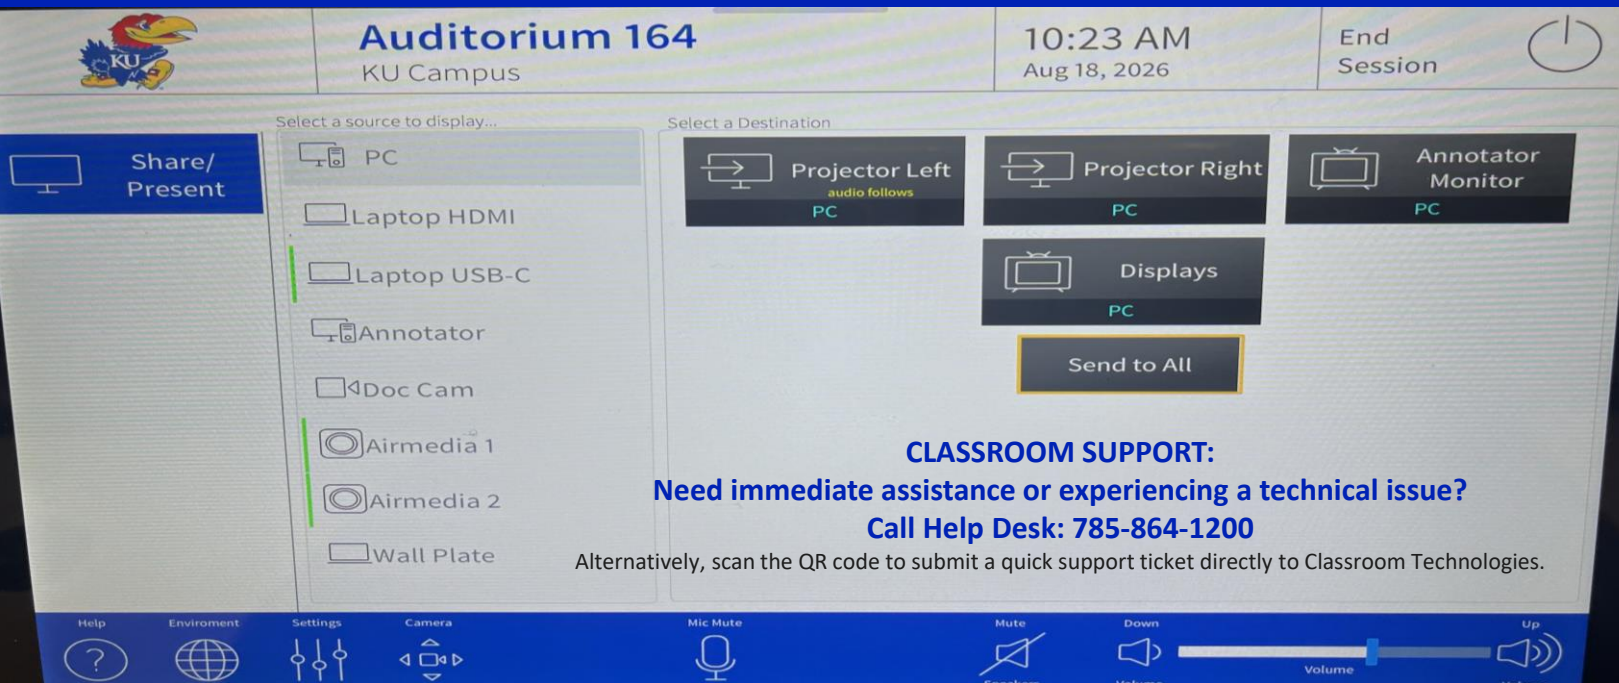

## 1. System Power

- Touch the screen/Jayhawk to awaken system.
- Use 'End Session' to reset or power down.

## 2. Select Source (PC, Laptop HDMI/USB-C, Doc Cam or AirMedia).

- Select Destination (Projector Left, Projector Right, or Displays).
- Press 'Send to All' to route to every screen instantly.

## 3. Annotator / Annotator Monitor

### (NEVER SEND ANNOTATOR TO ANNOTATOR MONITOR)

- Select source (PC, Laptop, Doc Cam, AirMedia).
- Select/route to 'Annotator Monitor' destination to activate the PC Monitor annotation.
- Select 2<sup>nd</sup> Destination (Projector Left, Projector Right, or Displays).
- To clear annotation: select clear on PC monitor or select new source and send to all.

Scan me!



## 4. Wireless Presenting - Select AirMedia 1 or AirMedia 2.

- Follow on-screen instructions to connect your device wirelessly.

## 5. Volume/ Mic Control

- Use the master slider bar at the bottom to adjust room audio level, mute/un-mute mics and speaker audio.

## 6. Camera Control

- Use the directional arrows (Up/Down/Left/Right) on the console grid to manually (pan-tilt-zoom) frame your shot or select Presets.